

Pure Genius



VersaEXPRESS
RF-640

The VersaEXPRESS™ RF-640

Productivity and reliability at a great price.

The Roland VersaEXPRESS™ RF-640 offers the perfect formula for digital printing success: high production speed, outstanding print quality, ease of use and unsurpassed reliability. The genius behind the RF-640 is reflected in its ability to quickly produce high quality graphics and prints, whilst keeping cost of operation low. That translates into increased output, satisfied customers and more money in your pocket.

Advanced Productivity Features

Equipped with advanced productivity features, the RF-640 is ideal for any high production environment. It boasts advanced print control technology for quality image reproduction, colour consistency and durability. While the robust media support brackets and take-up system handles narrow or wide rolls with ease. The innovative Roland Ink Switching System adds greater production capability by allowing you to seamlessly replace an empty 440ml cartridge when ink runs out, without having to stop and restart the printer. Workflow and output are further enhanced by Roland's user-friendly VersaWorks Dual RIP® software, which includes media profiles, nesting, cropping, predictive ink and media usage, and other powerful production tools. VersaWorks Dual also features built-in Roland Color System and PANTONE® libraries for easy and accurate spot colour matching.

State of the Art Print Technology

Specially designed to take full advantage of Roland's high-density, GREENGUARD Gold Certified ECO-SOL MAX inks, the RF-640 prints beautiful, saturated colour with virtually no banding – even at higher speeds. A mirrored CMYKMYC gold-plated print head firing seven different droplet sizes ensures stunning graphic results on a wide range of media at speeds up to 48.5m² per hour. Roland Intelligent Pass Control further enhances image quality by minimising any trace of banding and ensuring precise media feeding between passes.



Roland Printer Assist iPad app

Remotely manage production, test printing, cleaning and more



Intelligent imaging


Delivers smooth gradations, high-fidelity images and flawless solid colours



To learn more about the pure genius of the RF-640, view the video at www.rolanddg.co.in/products/printers/versaexpress-rf-640-wide-format-inkjet-printer



Billboards

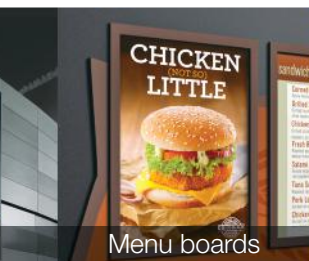

Menu boards



Vehicle graphics



Banners



Backlights




Engineered to print beautifully, the RF-640 offers a rare combination of value and performance, making it a smart purchase. Talk about genius!

The Genius of Simplicity

You don't have to be a genius to use an RF-640. In fact, this printer's innovative features and technological advancements make it incredibly easy to operate. With the Roland Printer Assist iPad app, you can even remotely manage production, test printing, and even cleaning functions from an iPad tablet. Additional features for increased ease of use and convenience include an easy-access front-loading ink cartridge system, media loading levers at both the front and back of the printer, and media brackets that support media rolls up to 40kgs as they're loaded into place.

Value for Money

The RF-640's design allows for low running costs and easy maintenance. Precise inkjet technology and new optimised profiles for ECO-SOL MAX ink work together for efficient ink consumption. An automated cleaning function also minimises ink usage and prolongs print head life. As a result, the RF-640 is highly efficient in both production and standby modes. As proof of its unmatched reliability, the RF-640 is backed by Roland's unrivalled RolandCare Original Warranty.

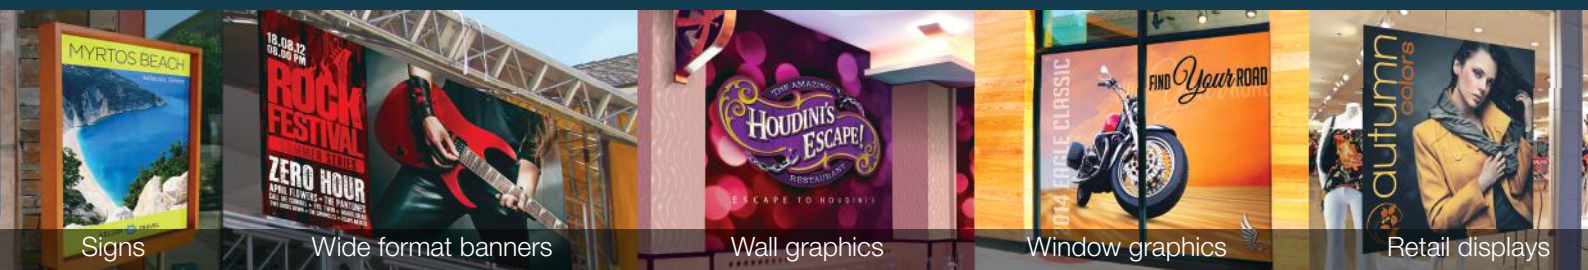

Signs

Wide format banners

Wall graphics

Window graphics

Retail displays



VersaEXPRESS™ RF-640

- Wide format printer with 1,625mm (64") width, built to provide unsurpassed printing performance, even when unattended, in demanding production environments
- 8-channel print head with mirrored CMYKMYMC configuration virtually eliminates chromatic banding
- Photorealistic printing up to 1440 dpi
- Roland Intelligent Pass Control™ technology
- High density ECO-SOL MAX ink produces rich, vibrant colours on coated or uncoated media
 - > Wide gamut for dynamic colour reproduction
 - > Increased density for rich, saturated colours
 - > Fast drying, virtually odourless, and scratch resistant
- Optional TUC-3 take-up system
 - > Supports extended production runs
 - > Adjustable right flange for easy centering of smaller rolls
 - > Supports roll media up to 50 kg

- Integrated two-stage heating system supports high-speed, volume production
- Automatic cleaning cycles simplify maintenance
- Roland VersaWorks Dual RIP software included
 - > Automates workflow for easy operation and better productivity
 - > Advanced colour management tools, including built-in PANTONE® and Roland Color System libraries
 - > Predictive ink calculator



Product specifications

For detailed features and specifications, visit www.rolanddg.co.in/products/printers/versaexpress-rf-640-wide-format-inkjet-printer

Printing method	Piezoelectric Inkjet	
Acceptable media	Width Thickness Weight Roll outer diameter Core diameter	Roll media: 259 to 1,625 mm (10.2 to 64 in.) Roll media: Maximum 1.0 mm (39mil) with liner Roll media: Maximum 40 kg (88 lb.) Maximum 210 mm (8.3 in.) 76.2 mm (3 in.) / 50.8 mm (2 in.)
Media take-up system	Maximum 210 mm (8.3 in.) outer diameter / Maximum 50 kg (110 lb.) weight	
Printing width	Maximum 1,615 mm (63.6 in.)	
Maximum Printing Speed	48.5 sqm/hr (522.05 sqft/hr) at 360x360 dpi, 1 pass	
Ink cartridges	Type Capacity Colour	Roland ECO-SOL MAX 4 colours (Cyan, Magenta, Yellow, Black, Black, Yellow, Magenta, Cyan)
Printing resolutions	Maximum 1,440 dpi	
Distance accuracy	Error of less than ± 0.3 % of distance traveled, or ± 0.3 mm (0.012 in.), whichever is greater.	
Media Heating System	Setting range for the preset temperature: Print Heater: 30 to 45°C (86 to 112°F) / Dryer: 30 to 50°C (86 to 122°F)	
Interface	Ethernet (10 BASE-T / 100 BASE-TX, automatic switching)	
Power-saving function	Automatic sleep feature	
Power supply	Voltage and frequency Required power capacity	AC 100 to 120 V ± 10%, 50/60 Hz AC 220 to 240 V ± 10%, 50/60 Hz 8.1 A 4.1
Power consumption	During operation Sleep mode	1,070 W 31 W
Acoustic noise level	During operation Sleep mode	62 db (A) or less 49 db (A) or less
Dimensions (with stand)	2,575 (W) x 795 (D) x 1,270 mm (H) 101.4 (W) x 31.1 (D) x 50 (H) in.)	
Weight (with stand)	140 kg (309 lb.)	
Environment	Power on Power off	Temperature: 15° to 32°C (59° to 90°F) (20°C [68°F] or more recommended) / Humidity: 35 to 80%RH (no condensation) Temperature: 5° to 40°C (41° to 104°F) / Humidity: 20 to 80%RH (no condensation)
Included items	Stand, power cord, media clamps, media holder, replacement blades for separation knife, Roland VersaWorks Dual RIP Software, cleaning kit, manual, etc.	

Apple and iPad are registered trademarks of Apple Inc.

Specifications subject to change. *Outdoor durability is based on accelerated weather tests. Results may vary depending upon location and application. Lamination may be required for some applications or environmental conditions. Scratch resistency is media dependant.



Promoted and Supported by: **APSom Infotex Ltd.**

CIN-U74899DL1993PLC054306

For more information please contact: Ph.: +91-120-4897992, email: sales@apsom.com | www.apsom.com

Product names, logos, brands, photographs and other trademarks are property of their respective trademark holders.

Corporate Office: C-56/47, Institutional Area, Sector 62, Noida, U.P-201307.

Sr. Group Product Manager - +91 9971286777

North - Delhi 9350205230/9350518160, Chandigarh 9810164378, Lucknow 9818800517/8173833431, Jaipur 9785648314/9350518160, Dehradun 9810164378 South - Bengaluru 777/V 13th Main 2nd Cross Hal II Stage, 100 ft road, Indira Nagar, Tel.: 9312096406, Chennai 9354936131, Hyderabad 9390393555/9312096406, Kochi 9354936131/ 9061830008/9656038378, Vijaywada 7217895285/9885714349 East- Bhubneshwar EB 28 Stage V, Laxmisagar, Bhubaneswar, Tel.: +91-674-2577081, Mob 9337292027/ 9238385001/7008503097, Patna 9334506323/9304735004, Kolkata 2/22, Ashok Nagar, Kolkata-700040, Mob.: 9830072308/8697000358, Guwahati 9337292027/7578006913, Ranchi 9304735004/9135690488, Raipur 8668221668/9337292027 West- Mumbai A-15, Nand Bhuvan Incl. Estate, Mahakali Caves Road, Andheri (East), Mumbai-400093. Tel +91 022 42460800/42460802/9819740078/08082012848, Ahmedabad 9824077124/9824092323, Pune 9705123405, Nagpur 8655469874, Indore 9335603351